



MODEL 199

- 1 Floor Covering
- 2 Cover

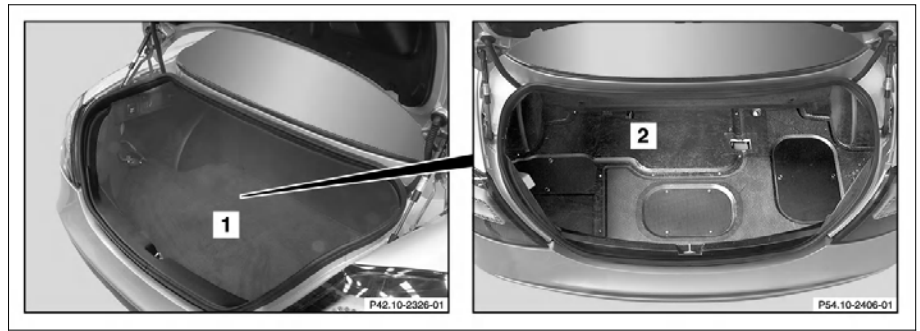

P54.10-2407-04

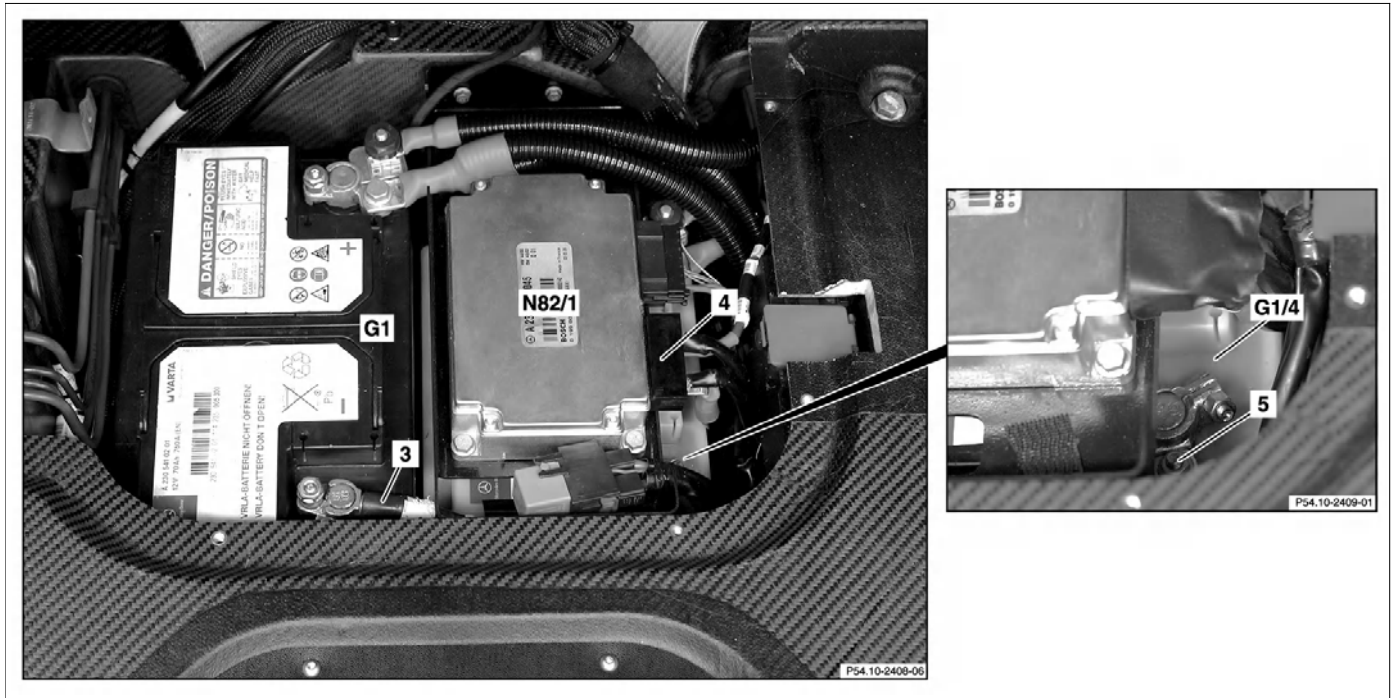

P54.10-2410-09


- 3 Ground cable
- 4 Connections

- 5 Ground cable

- G1 On-board electrical system battery

- G1/4 Starter battery
- N82/1 Vehicle power supply control module

	<p><b>Remove/install</b></p>	<p>No fire, sparks, open flames or smoking. Wear acid-resistant gloves and clothing and safety glasses with side guards. Do not place any conductive objects on the battery and avoid any short circuit from battery positive to ground. Only fill liquid battery electrolyte (diluted sulfuric acid) into suitable and appropriately marked containers.</p>	<p>AS54.10-Z-0001-01A</p>
	<p>Notes on battery</p>		<p>AH54.10-P-0001-01A</p>
	<p>Notes on AGM battery</p>		<p>AH54.10-P-0002-01A</p>
<p>1</p>	<p>Switch TELE AID to Service mode</p>	<p> As a result the additional battery is not discharged and no emergency call signal is transmitted, see operator's manual.</p>	
<p>2</p>	<p>Switch off all electrical consumers</p>		
<p>3</p>	<p>Remove side paneling in trunk</p>	<p> Only remove left side.</p>	<p>AR68.30-P-4800SLR</p>
<p>4</p>	<p>Remove cover (2)</p>		
<p>5</p>	<p>Disconnect ground line (3) from on-board electrical system battery (G1)</p>		
<p>6</p>	<p>Insulate ground line (3) of on-board electrical system battery (G1)</p>		
<p>7</p>	<p>Insulate connections (4) of vehicle power supply control unit (N82/1)</p>		

8	Disconnect the ground line (5) from the starter battery (G1/4)		
9	Insulate ground line (5) of starter battery (G1/4)		
10	Install in the reverse order		
11	Perform basic programming		AR00.19-P-0200SLR
12 	Read fault memory, erase if necessary Connect STAR DIAGNOSIS and read out fault memory		AD00.00-P-2000-04A