



P61.45-2011-09

☒ ☒	Remove/Install		
	<b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between the columns of the hydraulic hoist and position the four support plates below the hoist support points specified by the vehicle manufacturer.	<a href="#">AS00.00-Z-0010-01A</a>
1	Jack up and support vehicle		<a href="#">AR00.60-P-1000SLR</a>
2	Unscrew bolts (arrows)		
3	Remove rear diffuser		
4	Install in the reverse order		