

MODELS 199


- E3/1 Left rear fog lamp and backup lamp
- E4/1 Right rear fog lamp and backup lamp



P82.10-3516-11



P82.10-3517-11

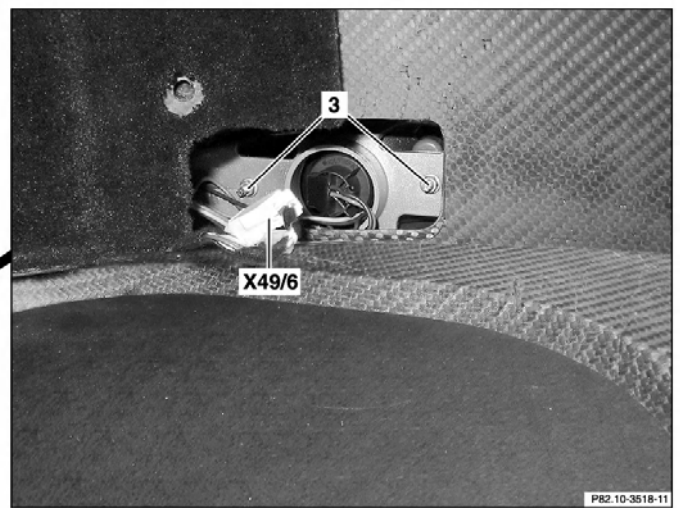


P82.10-3518-11

P82.10-3519-08

- 1 Floor mat
- 2 Cover
- 3 Nuts
- X49/6 Reverse lamp connector

Shown on right rear fog lamp and backup lamp

- 4 Rubber grommet
- E4/1 Right rear fog lamp and backup lamp

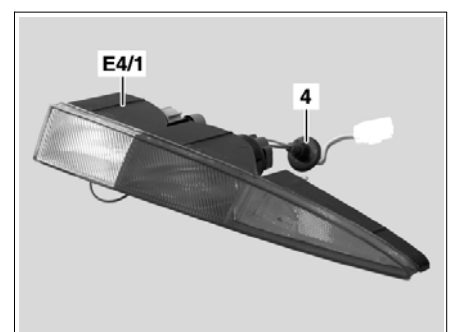

P82.10-3520-01

☒ ☒	Remove/Install		
1	Remove floor covering (1) from luggage compartment		
202 sensor downstream of TWC [KAT]	Remove cover (2).		
3	Detach backup lamp connector (X49/6)		
4	Unscrew nuts (3).		
5	Remove right rear fog lamp and backup lamp (E4/1) or left rear fog lamp and backup lamp (E3/1)	i Installation: Ensure that the grommet (4) is seated properly in the cable duct.	
6	Install in the reverse order		

7	Perform function test on right rear fog lamp and backup lamp (E4/1) and left rear fog lamp and backup lamp (E3/1)		
---	---	--	--