


MODELS 199


- 1 Floor mat
- 2 Cover
- E3 Left taillamp
- E4 Right taillamp

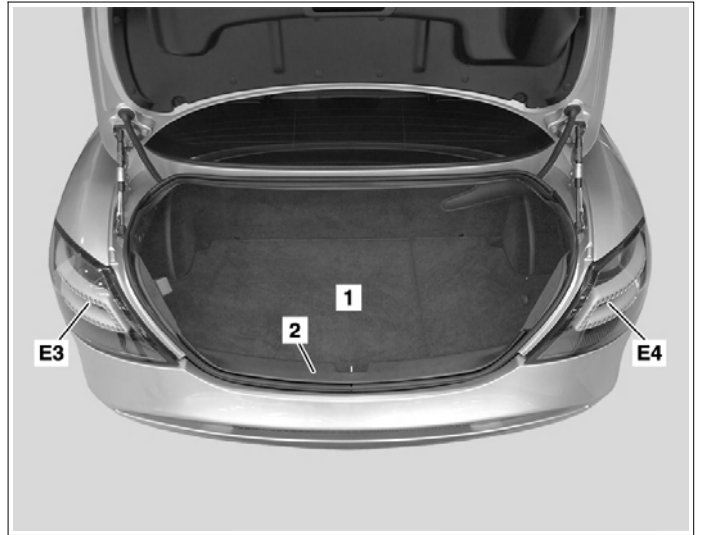

P82.10-3513-11

Shown on right side


- 3 Tie strap
- 4 Nuts
- 5 Rubber grommet
- 6 Plug connection

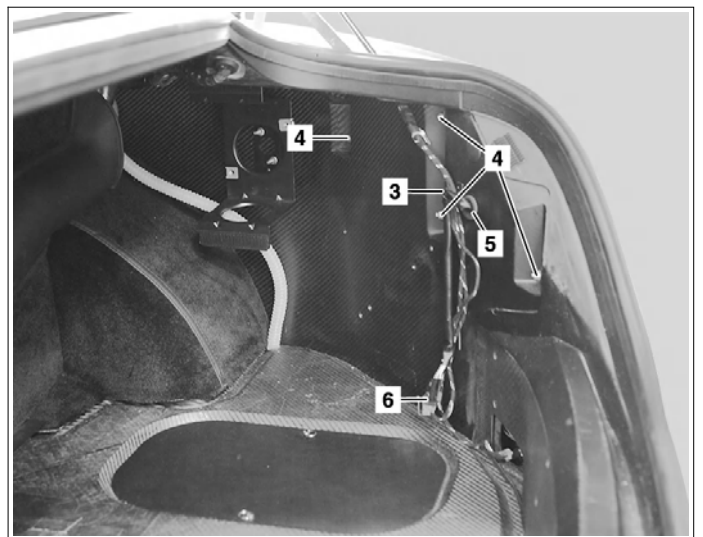



P82.10-3514-11

Shown on right side

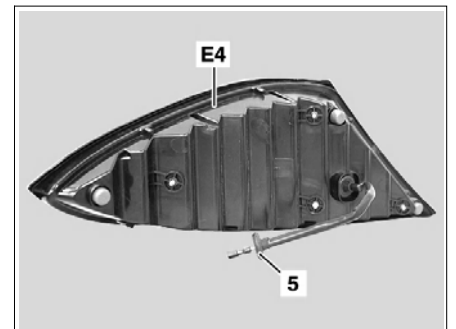- 5 Rubber grommet
- E4 Right taillamp



P82.10-3515-01

 	Remove/Install		
1	Remove floor covering (1) from luggage compartment		
202 sensor downstream of TWC [KAT]	Remove cover (2).		
3	Remove side paneling in trunk		AR68.30-P-4800SLR
4	Detach tie strap (3)	i Installation: replace tie straps (3).	
5	Unplug connector (6)		
6	Unscrew nuts (4)		
7	Remove right taillamp (E4) or left taillamp (E3)	i Installation: Ensure that the grommet (5) is seated properly in the cable duct.	
8	Install in the reverse order		

9	Perform function test on right taillamp (E4) and left taillamp (E3)		
---	---	--	--